

## SLZA 43 User guide for the mobile App



**SANELA  
Control**


**For the Android operating system**



User guide for the application available for download here:



### 1. Launching the application

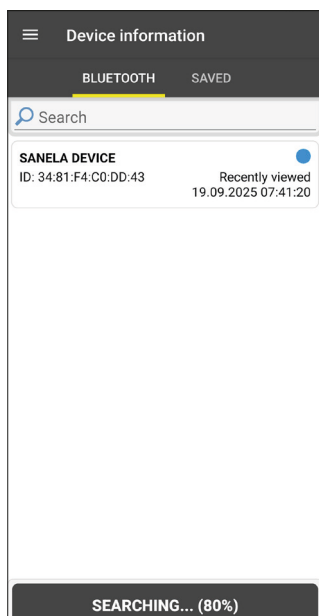

**Fig. No. 1**

Start the Sanela Control mobile application and select the SLZA 43 coin machine from the list. After a successful connection, a list of parameters for setting up the SLZA 43 will appear (Fig. No. 2).

### 2. Parameters

#### Machine activation:

Turns the machine ON or OFF.

#### Switching off devices 1-4:

Defines whether the device will be turned OFF or ON.

#### General settings:

Used to configure the machine. see Fig. No. 3.

#### Device function:

(door opener, shower, appliance see Fig. No. 4, 5, 6.

#### Phone number settings:

The phone number to which notifications are sent and which can be used to remotely control the machine.

#### Device status - door opener:

Current status of the machine.

#### Statistics:

Log of the number of inserted coins and tokens.

#### Long-term statistics:

Long-term log of the number of inserted coins and tokens.

#### Password change lock:

On: Locks password change.


Off: Password change is allowed.

**WARNING:** If the user locks the password change, only a service technician can unlock it again.

#### Time for password change:

Defines the period during which it is possible to change the factory password to a user password. If the defined time elapses, the Sanela device will need to be reset.

Values: 5 s. - 1200 s.

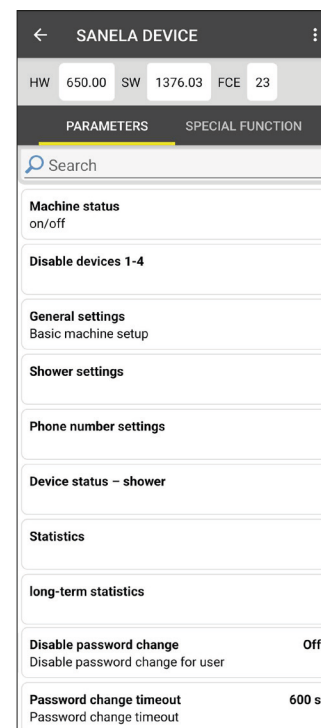

**Fig. No. 2**

### 3. General settings

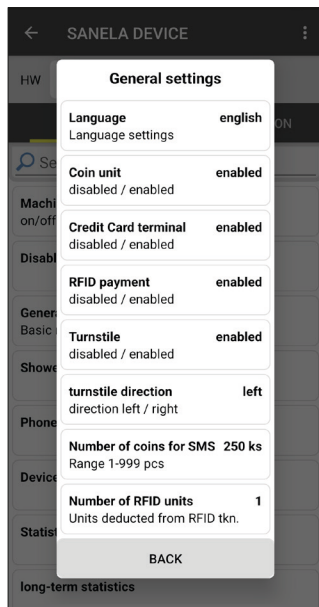


Fig. no. 3

**Language:**  
Defines the language selection.

**Coin unit:**  
Defines whether the coin unit is used.

**Card payment:**  
Defines whether card payment is used.

**RFID payment:**  
Defines whether RFID payment is used.

**Turnstile:**  
Defines whether the turnstile is used.

**Turnstile direction:**  
Defines the direction of passage left / right.

**Number of coins for SMS:**  
Defines the number of inserted coins required to send an SMS notification about a full cash box. Value range: 1-999 pcs.

**Number of RFID units:**  
Defines the number of RFID units that will be deducted when using this payment method.

### 4. Device function - door opener

**Lock unlocking duration:**  
Defines the duration of the lock unlocking. Range 1-310 s.

**Value for unlocking the lock:**  
Defines the value for unlocking the lock. Range 1-1200.

**Reference coin value for currency 1-3:**  
Defines the value of the lowest reference coin of the given currency.

**Door control operation without door contact:**  
Defines the use of the door lock "With" or "Without" door contact.

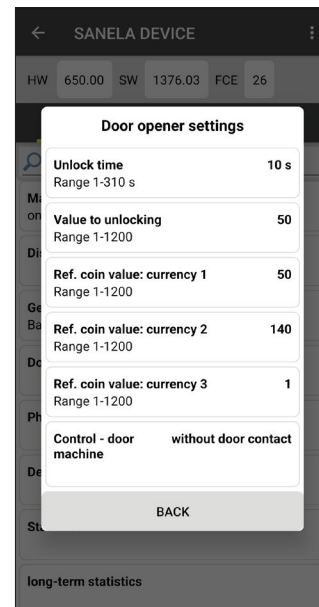


Fig. no. 4

### 5. Device function shower

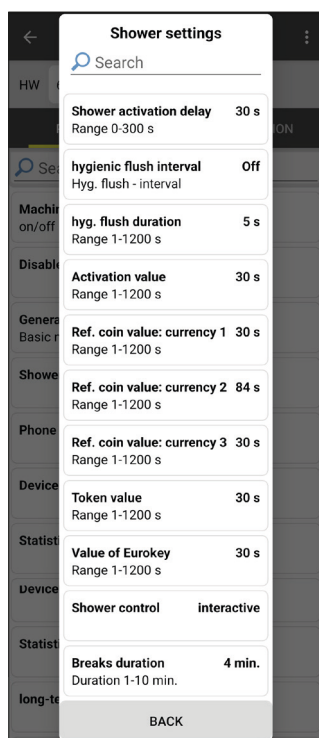


Fig. no. 5

**Shower activation delay:**  
Defines the delay of shower activation. Range 0-300 s

**Sanitation interval:**  
Defines the time since the last use after which a hygienic flush will occur, unless the device is used again before that time. Values: off, 6h, 8h, 12h, 24h, 48h, 72h, 168h

**Sanitation duration:**  
Defines the duration of sanitation. Range 1 - 1200 s.

**Value for activation:**  
The minimum time that must be paid for the shower to be activated. Range 1-1200 s.

**Reference coin value for currency 1-3:**  
Defines the value of the lowest reference coin of the given currency.

**Token value:**  
Defines whether the machine will accept tokens. To select this function, "Coin unit" must be selected.

**Value of Eurokey**  
Defines the value of the Eurokey.

**Shower control:**  
"With" or "Without" button for starting and stopping water in the shower.

**Break duration:**  
Defines the time after which credit will be deducted even when the shower is not in use. For example, if set to 5 min, and the user stops the shower 5 times for 1 min each, credit will then be deducted even when the shower is stopped.

### 6. Device function appliance

**Value for activation:**  
The minimum time that must be paid for the device to be activated.

**Reference coin value for currency 1-3:**  
Defines the value of the lowest reference coin of the given currency.

**Token value:**  
Defines whether the machine will accept tokens. To select this function, "Coin unit" must be selected.

**Value of Eurokey**  
Defines the value of the Eurokey.

**Appliance control:**  
Defines the value for activation as inactive/active.

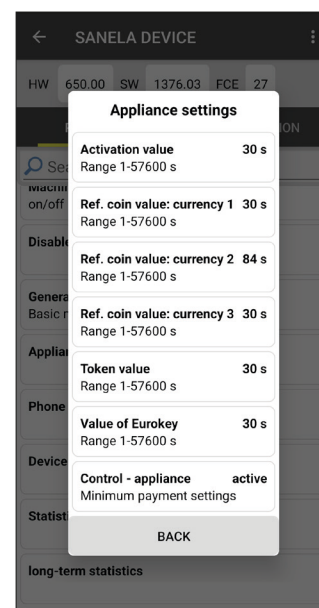


Fig. no. 6

7. Special functions

←

SANELA DEVICE

⋮

HW

650.00

SW

1376.03

FCE

27

PARAMETERS

SPECIAL FUNCTION

🔍

Search

Identify

Identify

Restart

Restart

Output 1

switched off / switched on

Output 2

switched off / switched on

Output 3

switched off / switched on

Output 4

switched off / switched on

Credit reset

Clear cashbox

Reset long-term statistics

**Device identification:**  
Identification of the connected Sanela device by sound/optical signal (depending on the type of Sanela device electronics), after which the solenoid valve is activated.

**Restart:**  
Restarts the coin machine.

**Output 1-4:**  
Defines the switching off or on of the given output.

**Reset credit:**  
Resets the number of used RFID units.

**Reset cash register:**  
Resets the statistics of inserted coins.

**Reset long-term statistics:**  
This will reset the statistics for a longer period.

Fig. No. 7

## SLZA 43 User guide for the mobile App



**SANELA  
Control**


**For the iOS operating system**



**User guide for the  
application available  
for download here:**



### 1. Launching the application

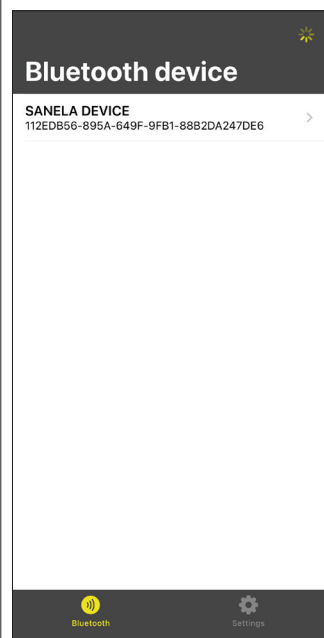

**Fig. No. 1**

Start the Sanela Control mobile application and select the SLZA 43 coin machine from the list. After a successful connection, a list of parameters for setting up the SLZA 43 will appear (Fig. No. 2).

### 2. Parameters

#### **Machine activation:**

Turns the machine ON or OFF.

#### **Switching off devices 1-4:**

Defines whether the device will be turned OFF or ON.

#### **General settings:**

Used to configure the machine. see Fig. No. 3.

#### **Device function:**

(door opener, shower, appliance see Fig. No. 4, 5, 6.

#### **Phone number settings:**

The phone number to which notifications are sent and which can be used to remotely control the machine.

#### **Device status - door opener:**

Current status of the machine.

#### **Statistics:**

Log of the number of inserted coins and tokens.

#### **Long-term statistics:**

Long-term log of the number of inserted coins and tokens.

#### **Password change lock:**


On: Locks password change.

Off: Password change is allowed.

**WARNING:** If the user locks the password change, only a service technician can unlock it again.

#### **Time for password change:**

Defines the period during which it is possible to change the factory password to a user password. If the defined time elapses, the Sanela device will need to be reset. Values: 5 s. - 1200 s.

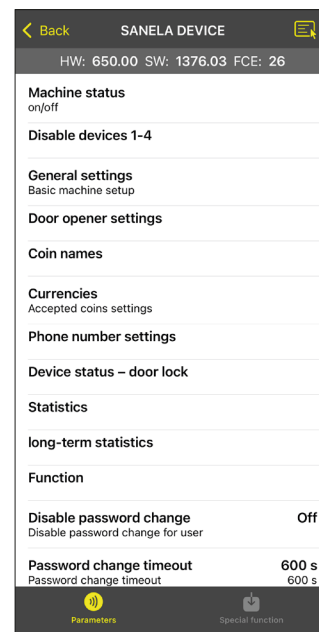

**Fig. No. 2**

### 3. General settings

HW: 650.00 SW: 1376.03 FCE: 27

General settings

Language Language settings	czech
Coin unit disabled / enabled	enabled
Credit Card terminal disabled / enabled	enabled
RFID payment disabled / enabled	enabled
Turnstile disabled / enabled	enabled
turnstile direction direction left / right	left
Number of coins for SMS Range 1-999 pcs	250 ks
Number of RFID units Units deducted from RFID tkn.	1

Back

Parameters Special function

Fig. no. 3

**Language:**  
Defines the language selection.

**Coin unit:**  
Defines whether the coin unit is used.

**Card payment:**  
Defines whether card payment is used.

**RFID payment:**  
Defines whether RFID payment is used.

**Turnstile:**  
Defines whether the turnstile is used.

**Turnstile direction:**  
Defines the direction of passage left / right.

**Number of coins for SMS:**  
Defines the number of inserted coins required to send an SMS notification about a full cash box. Value range: 1-999 pcs.

**Number of RFID units:**  
Defines the number of RFID units that will be deducted when using this payment method.

### 4. Device function - door opener

**Lock unlocking duration:**  
Defines the duration of the lock unlocking. Range 1-310 s.

**Value for unlocking the lock:**  
Defines the value for unlocking the lock. Range 1-1200.

**Reference coin value for currency 1-3:**  
Defines the value of the lowest reference coin of the given currency.

**Door control operation without door contact:**  
Defines the use of the door lock "With" or "Without" door contact.

HW: 650.00 SW: 1376.03 FCE: 26

Door opener settings

Unlock time Range 1-310 s	10 s
Value to unlocking Range 1-1200	50
Ref. coin value: currency 1 Range 1-1200	50
Ref. coin value: currency 2 Range 1-1200	140
Ref. coin value: currency 3 Range 1-1200	1
Control - door machine without door contact	

Back

Parameters Special function

Fig. no. 4

### 5. Device function shower

HW: 650.00 SW: 1376.03 FCE: 23

Shower settings

Shower activation delay Range 0-300 s	30 s
hygienic flush interval Hyg. flush - interval	Off Off
hyg. flush duration Range 1-1200 s	5 s
Activation value Range 1-1200 s	30 s
Ref. coin value: currency 1 Range 1-1200 s	30 s
Ref. coin value: currency 2 Range 1-1200 s	84 s
Ref. coin value: currency 3 Range 1-1200 s	30 s
Token value Range 1-1200 s	30 s
Value of Eurokey Range 1-1200 s	30 s
Shower control	interactive
Breaks duration Duration 1-10 min.	4 min.

Back

Parameters Special function

Fig. no. 5

**Shower activation delay:**  
Defines the delay of shower activation. Range 0-300 s

**Sanitation interval:**  
Defines the time since the last use after which a hygienic flush will occur, unless the device is used again before that time. Values: off, 6h, 8h, 12h, 24h, 48h, 72h, 168h

**Sanitation duration:**  
Defines the duration of sanitation. Range 1 - 1200 s.

**Value for activation:**  
The minimum time that must be paid for the shower to be activated. Range 1-1200 s.

**Reference coin value for currency 1-3:**  
Defines the value of the lowest reference coin of the given currency.

**Token value:**  
Defines whether the machine will accept tokens. To select this function, "Coin unit" must be selected.

**Value of Eurokey**  
Defines the value of the Eurokey.

**Shower control:**  
"With" or "Without" button for starting and stopping water in the shower.

**Break duration:**  
Defines the time after which credit will be deducted even when the shower is not in use. For example, if set to 5 min, and the user stops the shower 5 times for 1 min each, credit will then be deducted even when the shower is stopped.

### 6. Device function appliance

**Value for activation:**  
The minimum time that must be paid for the device to be activated.

**Reference coin value for currency 1-3:**  
Defines the value of the lowest reference coin of the given currency.

**Token value:**  
Defines whether the machine will accept tokens. To select this function, "Coin unit" must be selected.

**Value of Eurokey**  
Defines the value of the Eurokey.

**Appliance control:**  
Defines the value for activation as inactive/active.

HW: 650.00 SW: 1376.03 FCE: 27

Appliance settings

Activation value Range 1-57600 s	30 s
Ref. coin value: currency 1 Range 1-57600 s	30 s
Ref. coin value: currency 2 Range 1-57600 s	84 s
Ref. coin value: currency 3 Range 1-57600 s	30 s
Token value Range 1-57600 s	30 s
Value of Eurokey Range 1-57600 s	30 s
Control - appliance Minimum payment settings	active

Back

Parameters Special function

Fig. no. 6

7. Special functions

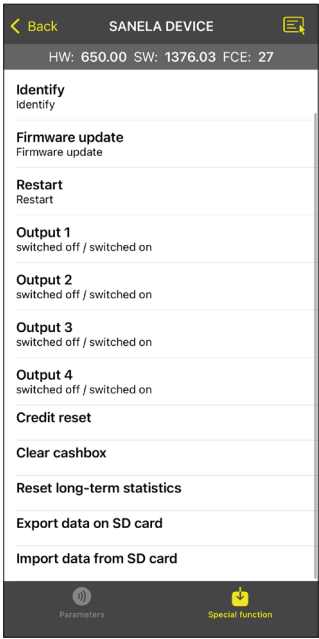


Fig. No. 7

**Device identification:**  
Identification of the connected Sanela device by sound/optical signal (depending on the type of Sanela device electronics), after which the solenoid valve is activated.

**Restart:**  
Restarts the coin machine.

**Output 1-4:**  
Defines the switching off or on of the given output.

**Reset credit:**  
Resets the number of used RFID units.

**Reset cash register:**  
Resets the statistics of inserted coins.

**Reset long-term statistics:**  
This will reset the statistics for a longer period.